



VX-8208-SMBU(A)

Configuration Guide




V 3.00

Date: 11/2021


Table of Contents

1. Key Definitions.....	3
2. Precautions before setting up your phone	5
3. To pair a handset.....	5
4. Configuring the Room Number	6
5. Handset Speed Dial settings.....	7
6. Receive volume setting of handset.....	8
7. Speaker volume setting of handset.....	8


1.Key Definitions

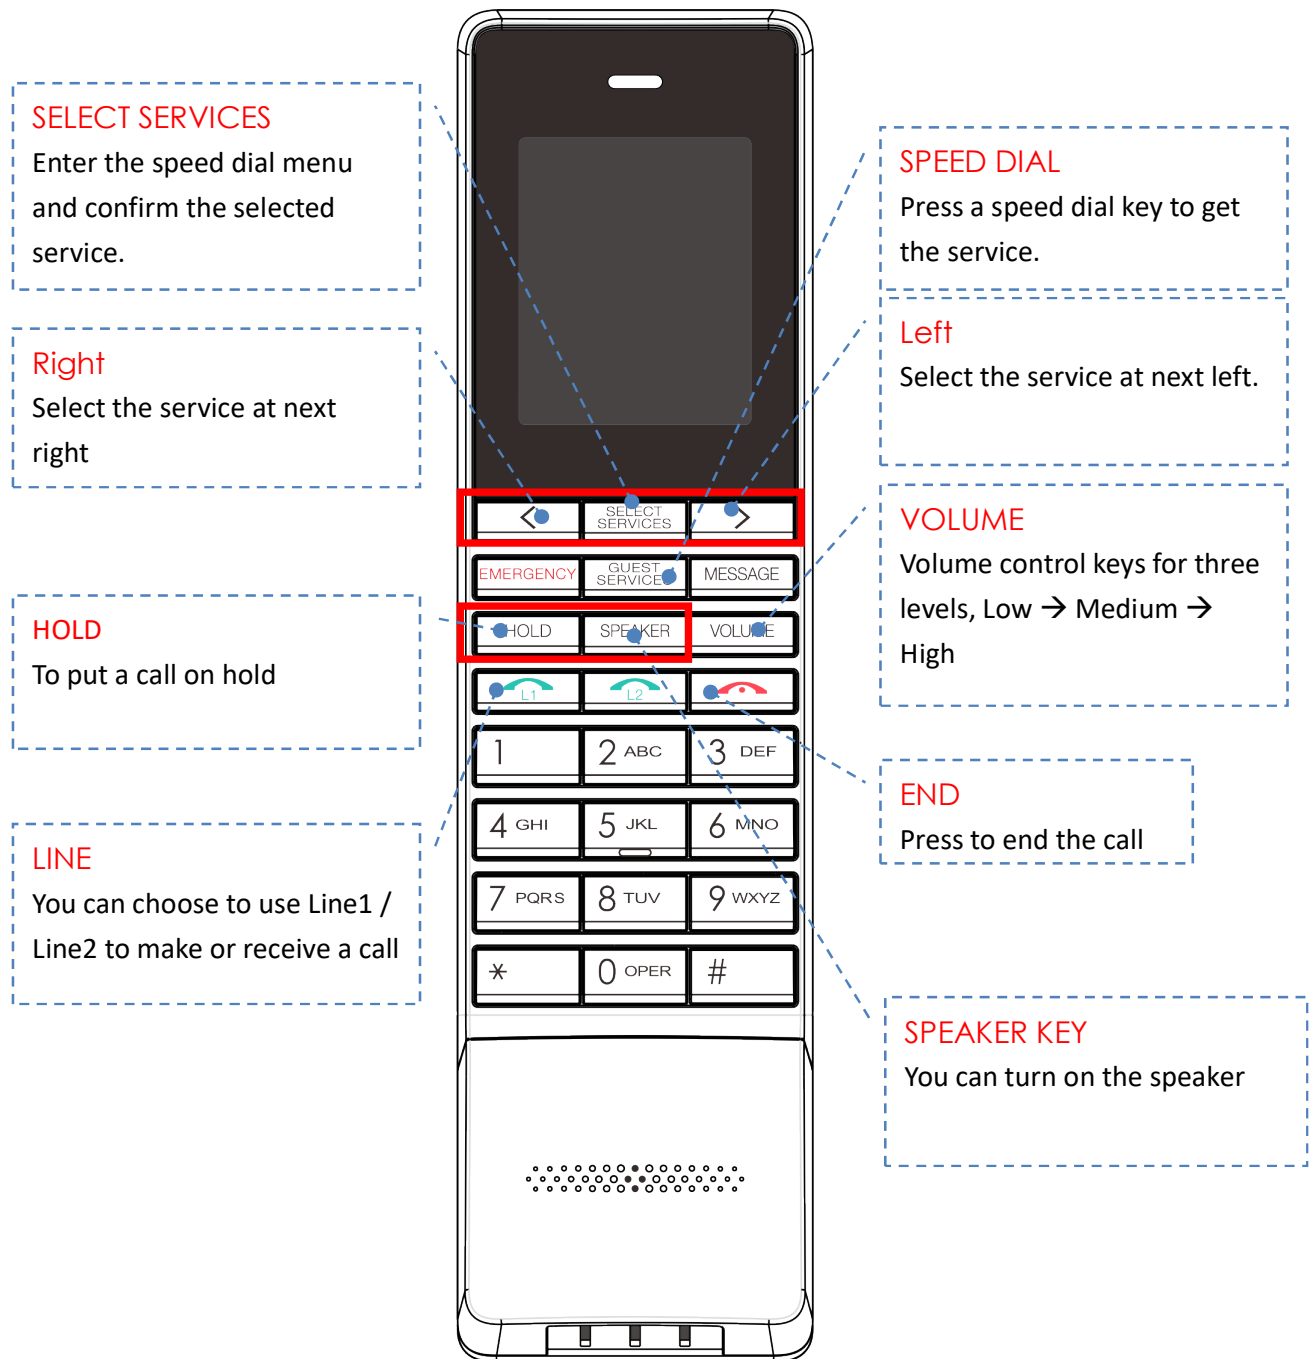

DC PORT
5V AC power input.

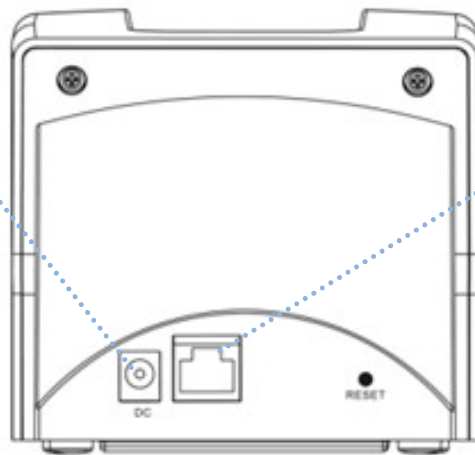

LINE PORT
Telephone line input

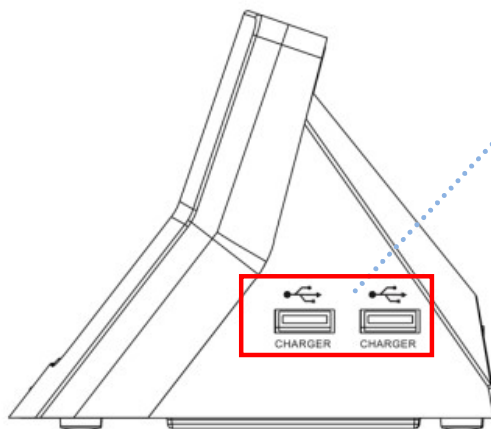


USB Charger port
USB charging ports



Handset search
Press to page the handset


2. Precautions before setting up your phone

1. Please connect the power supply
2. Please remove the telephone line

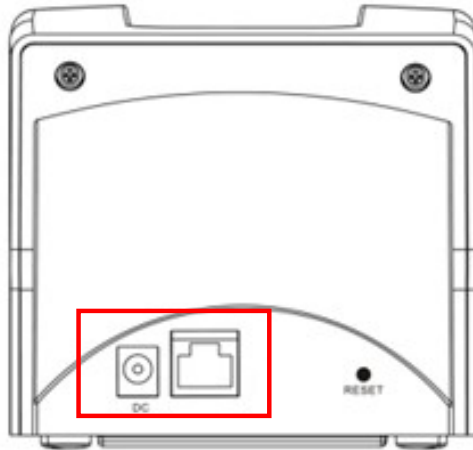


3. To pair a handset

Reset the DECT handset back to factory default by pressing ****6863*** and then it shows "NOT SUB" after restarting. Then put the DECT handset on the base, it will be paired automatically.

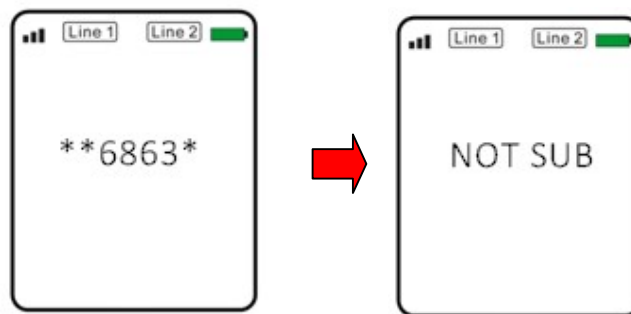


Pairing process → NOT SUB → SEARCHING → RFPI number (1234567890A)
→ Connecting → Back to standby screen

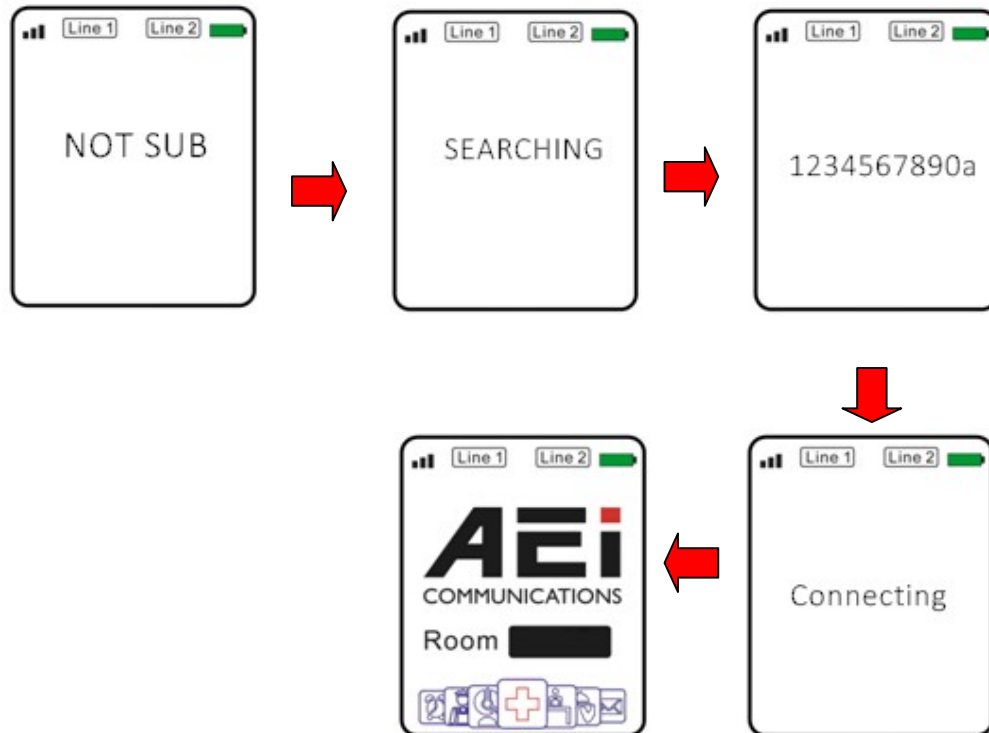

4. Configuring the Room Number

1. From the paired DECT handset, please press *13*Room Number and then Line 1.
(For example, *13*888 and then Line 1)

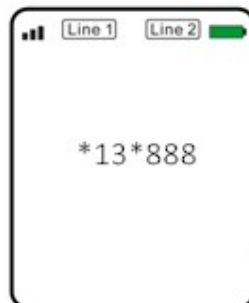

2. Base will reboot automatically
3. Press Line1, then the room number will be displayed after a few seconds.



5. Handset Speed Dial settings

There are two types of speed dial settings. One is software icons showing on the display and the other is the hard keys (**EMERGENCY**, GUEST SERVICES and MESSAGE)



To configure speed dials' number of the DECT handset, from 01 to 10, see picture below, then configure respectively.

Please press *01*NNN then press Line 1 or Green key, NNN is the speed dial number.

Please press *02*NNN then press Line 1 or Green key, NNN is the speed dial number.

...

Please press *10*NNN then press Line 1 or Green key, NNN is the speed dial number.

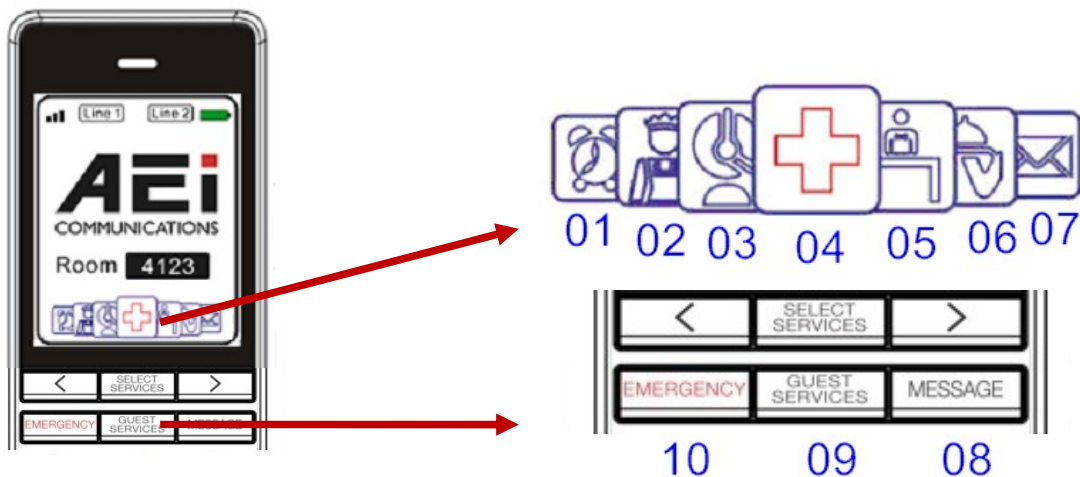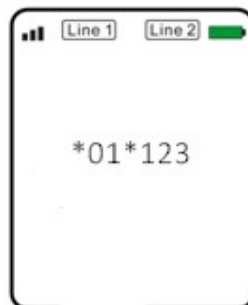

Speed dial instruction

Software buttons 01~07

01 =*01*123

02 =*02*123

03 =*03*123

04 =*04*123

05 =*05*123

06 =*06*123

07 =*07*123

Hard keys 08~010

08 =*08*123 (MESSAGE)

09 =*09*123 (GUEST SERVICES)


10 =*10*123 (ENERGENCY)

6. Receive volume setting of handset

1. Enter ** 6865 * to enter the setting mode
2. Select " Ear Vol "
3. Enter Mid volume, press Line1 to confirm (default value 100)
4. Enter the volume interval, press Line1 to confirm (default value 1200)
5. After setting, it will automatically leave the setting mode and you can use it

Volume Legend

Ear bass = 100 , ear gap=1200

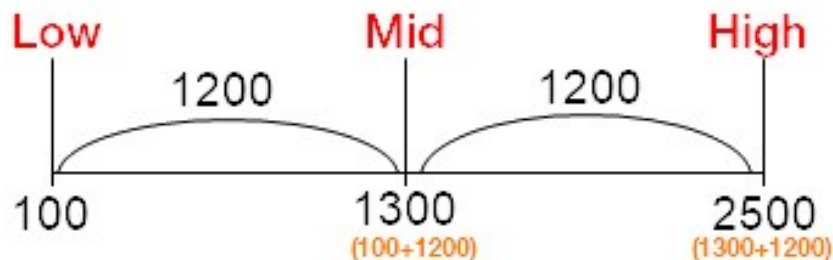

7. Speaker volume setting of handset

1. Enter ** 6865 * to enter the setting mode
2. Select "Speaker Vol "
3. Enter Mid volume, press Line1 to confirm (default value 2000)
4. Enter the volume interval, press Line1 to confirm (default value 1500)
5. After setting, it will automatically leave the setting mode and you can use it

Volume Legend

HF bass = 2000, HF gap=1500

